


## **QFM**




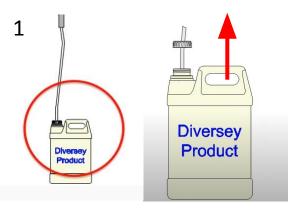

Take out the suction line from the product container



Put the suction line into a bucket of warm water, leave it soaking for a while

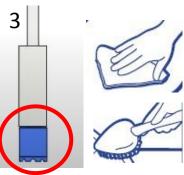


Check the footvalve on plugging / incrustation, if necessary clean it with a brush or damp cloth



Put the suction line back into the bucket of warm water,




Put a empty bottle and/ or bucket at dispenser outlet

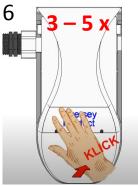

Push the dispensing button



Confirm function (productsuction & water)

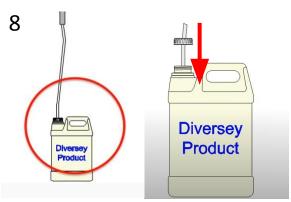

Put the suction line back into the product container