



# Oxivir Plus Spray

## Broad spectrum cleaner and disinfectant

### Description

Diversey Oxivir Plus Spray is a ready to use cleaner disinfectant for use on hard, nonporous surfaces and some soft furnishings.

### Key properties

- Bactericidal, Virucidal, Yeasticidal and Sporicidal
- Patented Hydrogen Peroxide based acidic formulation
- Short contact times
- Effective Cleaner
- Fragrance free

### Benefits

- Extensively tested against European norms and effective against multiple pathogens of concern, including HIV, HBV, HCV, Avian Influenza, Pseudomonas aeruginosa, Staphylococcus aureus, Salmonella enterica, MRSA, VRE and Norovirus
- Cleans and disinfects in one step, reducing working time
- Excellent cleaning performance, including descaling and lime limitation removes the need for a pre-cleaning step
- Good user safety profile, with no hazard warnings on RTU format; does not contain respiratory irritants
- AHP formulation is gentle on surfaces extending equipment life
- Good environmental profile. Active breaks down into oxygen and water
- Suitable for use in high risk areas in Healthcare, including OR, ICU, NICU and patient rooms

### Use instructions


#### Spray cleaning and disinfection:

1. Remove gross soils.
2. Spray product directly on the surface.
3. Wipe with a clean cloth.

**Note:** To disinfect for Norovirus, pre clean the surface prior to disinfection. Allow surface to remain wet for two minutes.

### Dosage:

Ready to use, no dilution required.

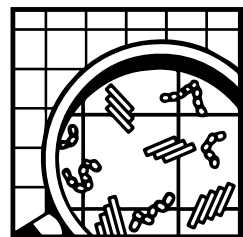

© A.I.S.E.



# Oxivir Plus Spray

## Technical data

Appearance: Clear, yellow liquid

pH value (in use): 1.8

Relative density (20°C): 1.000

*The above data is typical of normal production and should not be taken as a specification.*

## Safe handling and storage information

Full guidance on the handling and disposal of this product is provided in a separate Safety Data Sheet; [sds.diverseym.com](https://sds.diverseym.com). Store in original closed containers away from extremes of temperature. Only for professional users / specialists.

Reacts with oxidisable substances.

## Product compatibility

Do not mix with other products. Do not use on acid-sensitive surfaces. Under recommended conditions of use, Diversey Oxivir Plus Spray is suitable for use on most materials commonly encountered.

## Microbiological data

Efficacy proven by compliance with Efficacy proven by compliance with: EN1276, EN13697, EN1650, EN14776, EN13624 and EN13727.

## Environmental information

The surfactants used in this product are biodegradable in compliance with the requirement of EU Detergent Regulation, EC 648/2004.

## Available pack sizes

Diversey Oxivir Plus Spray is available in 6x0.75L.