Diversey

Diversey Vericlean System



The Diversey VeriClean System is an evidence-based approach to improve the cleaning and disinfection of high touch surfaces by integrating products, processes, training and validation for your facility.

Conducting an audit with 4 easy steps



Step 1 Prior to cleaning spray the surface.


Use the fluorescent spray 15cm away from the surface.

Ensure spray is sufficient and covering the area you will audit.



Step 2

The housekeeper/ cleaner cleans the room following the normal cleaning procedure.

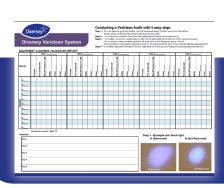



Step 3

The auditor checks the marked surfaces with the UV black light for the removal of the fluorescent spray.

Not Removed

If the surface is clean the black light will not show signs of the fluorescent spray.

If not properly cleaned the spray will be visible when the light shines as bright spatters.

Step 4

The auditor adds the information into the audit sheet for review by your facility to track cleaning improvements.





Fluorescent Marking Spray & UV/Black Light

Directions for use

- 1. Uncap the spray pen and hold it 15–23cm above the surface to be marked.
- 2. Apply a single spray of solution to the surface and allow surface to air dry.
- 3. After room cleaning, use black light to test if surface has been cleaned properly.
- 4. To use black light, hold it at a 45° angle to the surface, pointing away from the user. Never point black light at anyone's eyes.

Ideal on hard surfaces such as ceramic, tile, tub and walls.

Technical data				
Appearance	Clear yellow liquid	Odour	Alcohol	
Flash point	50.1°C	Shelf life	1 year	
Volatile Organic Compounds (VOC)	5% complete	Specific gravity	0.994	

The above data is typical of normal production and should not be taken as a specification.

Product	Pack size	SKU Code	Availability
Diversey VeriClean System UV/Black Light (requires 3AAA batteries, not included)	4 x 1	95696916	ANZ
Fluorescent Marking Spray* • 0.05ml per spray • 200 sprays per 10ml tube	6 x 10ml	101104426	ANZ

Safe handling and storage information

Please make sure your employees read and understand the product label and Safety Data Sheet before using this product. The label contains directions for use, and both the label and SDS contain hazard warnings, precautionary statements and first aid procedures.











Oxivir's range of Hospital Grade disinfectants kills COVID-19 in just 15 sec*.

Oxivir protects your staff, customers and brand in the most efficient, safe and sustainable way.

* Oxivir Excel Wipes

